


INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	E4
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	L02FB-MC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
11	SB	-
12	B/W	-
27	Y	-
28	G	-
30	GR	-
32	L	-
33	P	-
36	LG	-

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH08FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/Y	-
43	SB	-
46	O	-

Connector No.	E7
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4




Terminal No.	Color of Wire	Signal Name [Specification]
80	W	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
2F	W	-
8F	L	-

Connector No.	E104
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
6	P	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

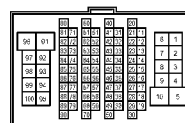

Terminal No.	Color of Wire	Signal Name [Specification]
11	SB	-
13	P	-
14	L	-
15	SB	-
32	G	-
33	GR	-
80	Y	-
82	O	-
91	GR	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	W	-