



## IGNITION POWER SUPPLY

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

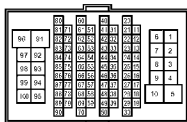

Terminal No.	Color of Wire	Signal Name [Specification]
69	P	-
70	L	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
4	Y	-
6	P	-

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS




Terminal No.	Color of Wire	Signal Name [Specification]
10G	O	-

Connector No.	B33
Connector Name	CONDENSER
Connector Type	M01FW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-

Connector No.	B45
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-RZ8-L-LH-Z

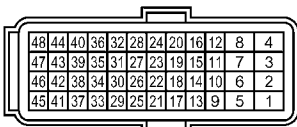


Terminal No.	Color of Wire	Signal Name [Specification]
17	Y	IGNITION SWITCH SIGNAL

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

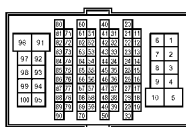


Terminal No.	Color of Wire	Signal Name [Specification]
10	R	-
63	LG	-
71	R	-
96	Y	-

Connector No.	B230
Connector Name	FUEL PUMP CONTROL MODULE
Connector Type	TM10FB



Terminal No.	Color of Wire	Signal Name [Specification]
10	Y	BATTERY

Connector No.	B242
Connector Name	SUB FUEL PUMP RELAY
Connector Type	MS02FL-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
3	R	-