



Engine
coolant
temperature

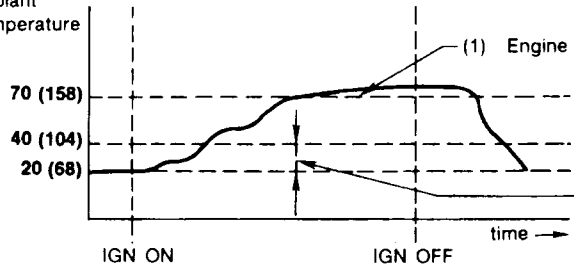

(1) Engine coolant temperature should go over 70°C (158°F).

(2) Engine coolant temperature should change more than 20°C (68°F) after starting engine.

Engine
speed
rpm

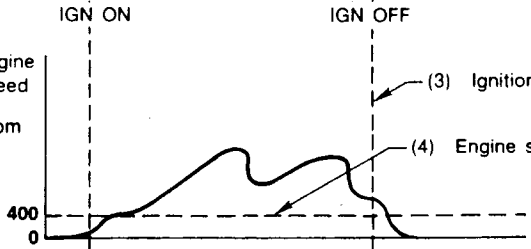

(3) Ignition switch should be changed from "ON" to "OFF".

(4) Engine speed should go over 400 rpm.