



ENGINE CONTROL SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

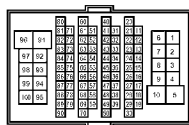


Terminal No.	Color of Wire	Signal Name [Specification]
20	GR	-
69	P	-
70	L	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
6	P	-

Connector No.	B45
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-RZ8-L-LH-Z

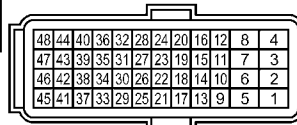

Terminal No.	Color of Wire	Signal Name [Specification]
11	L	CAN-H
15	P	CAN-L
19	GR	STARTER RELAY SIGNAL

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

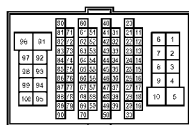

Terminal No.	Color of Wire	Signal Name [Specification]
8	O	-
9	W	-
10	R	-
31	V	-
32	LG	-
33	BR	-
34	L	-
60	R	-
61	P	-
62	L	-
63	LG	-

69	P	-
70	L	-
80	L	-
81	SB	-
82	V	-
83	B	-
87	W	-
96	Y	-

Connector No.	B225
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)
Connector Type	SGZ05FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
3	L	-
4	BR	-
5	G	-

Connector No.	B228
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP (SUB FUEL PUMP)
Connector Type	SGZ02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	B	-