



IGNITION POWER SUPPLY FUSE No. 45

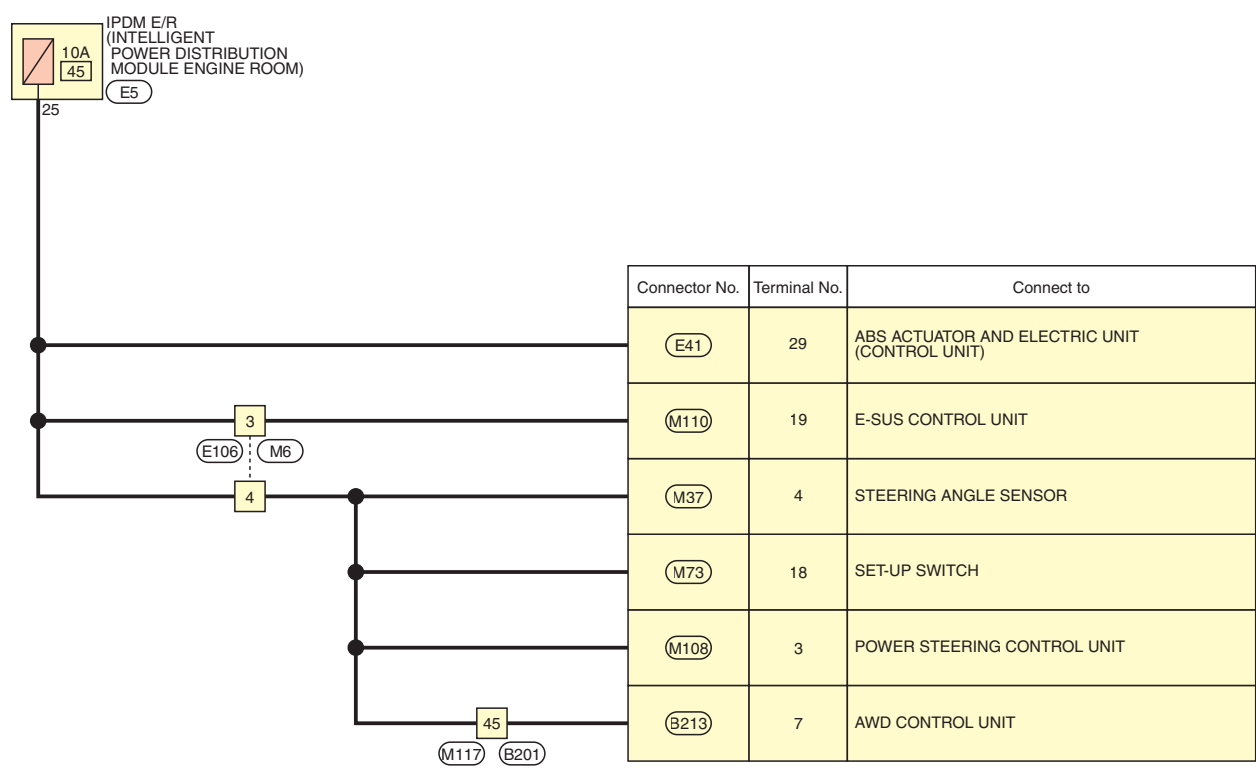


IGNITION POWER SUPPLY FUSE No. 45

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

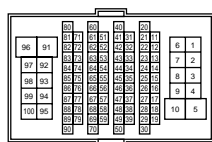


Terminal No.	Color of Wire	Signal Name [Specification]
45	W	—

Connector No.	B213
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
7	W	IGN

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V




Terminal No.	Color of Wire	Signal Name [Specification]
25	O	—

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	AEZ43FB-AJZ4




Terminal No.	Color of Wire	Signal Name [Specification]
29	O	UZ

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

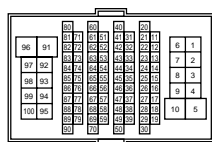


Terminal No.	Color of Wire	Signal Name [Specification]
3	O	—
4	O	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

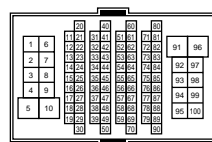

Terminal No.	Color of Wire	Signal Name [Specification]
3	R	—
4	G	—

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	O	IGN


Connector No.	M73
Connector Name	SET-UP SWITCH
Connector Type	TK24FW-1V



Terminal No.	Color of Wire	Signal Name [Specification]
18	G	IGN


IGNITION POWER SUPPLY FUSE No. 45

Connector No.	M108
Connector Name	POWER STEERING CONTROL UNIT
Connector Type	TH12FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
3	G	VIGN

Connector No.	M110
Connector Name	E-SUS CONTROL UNIT
Connector Type	FEC21FB-FHC2

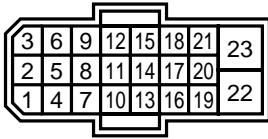

Terminal No.	Color of Wire	Signal Name [Specification]
19	R	IGN

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

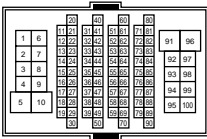

Terminal No.	Color of Wire	Signal Name [Specification]
45	G	-