




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

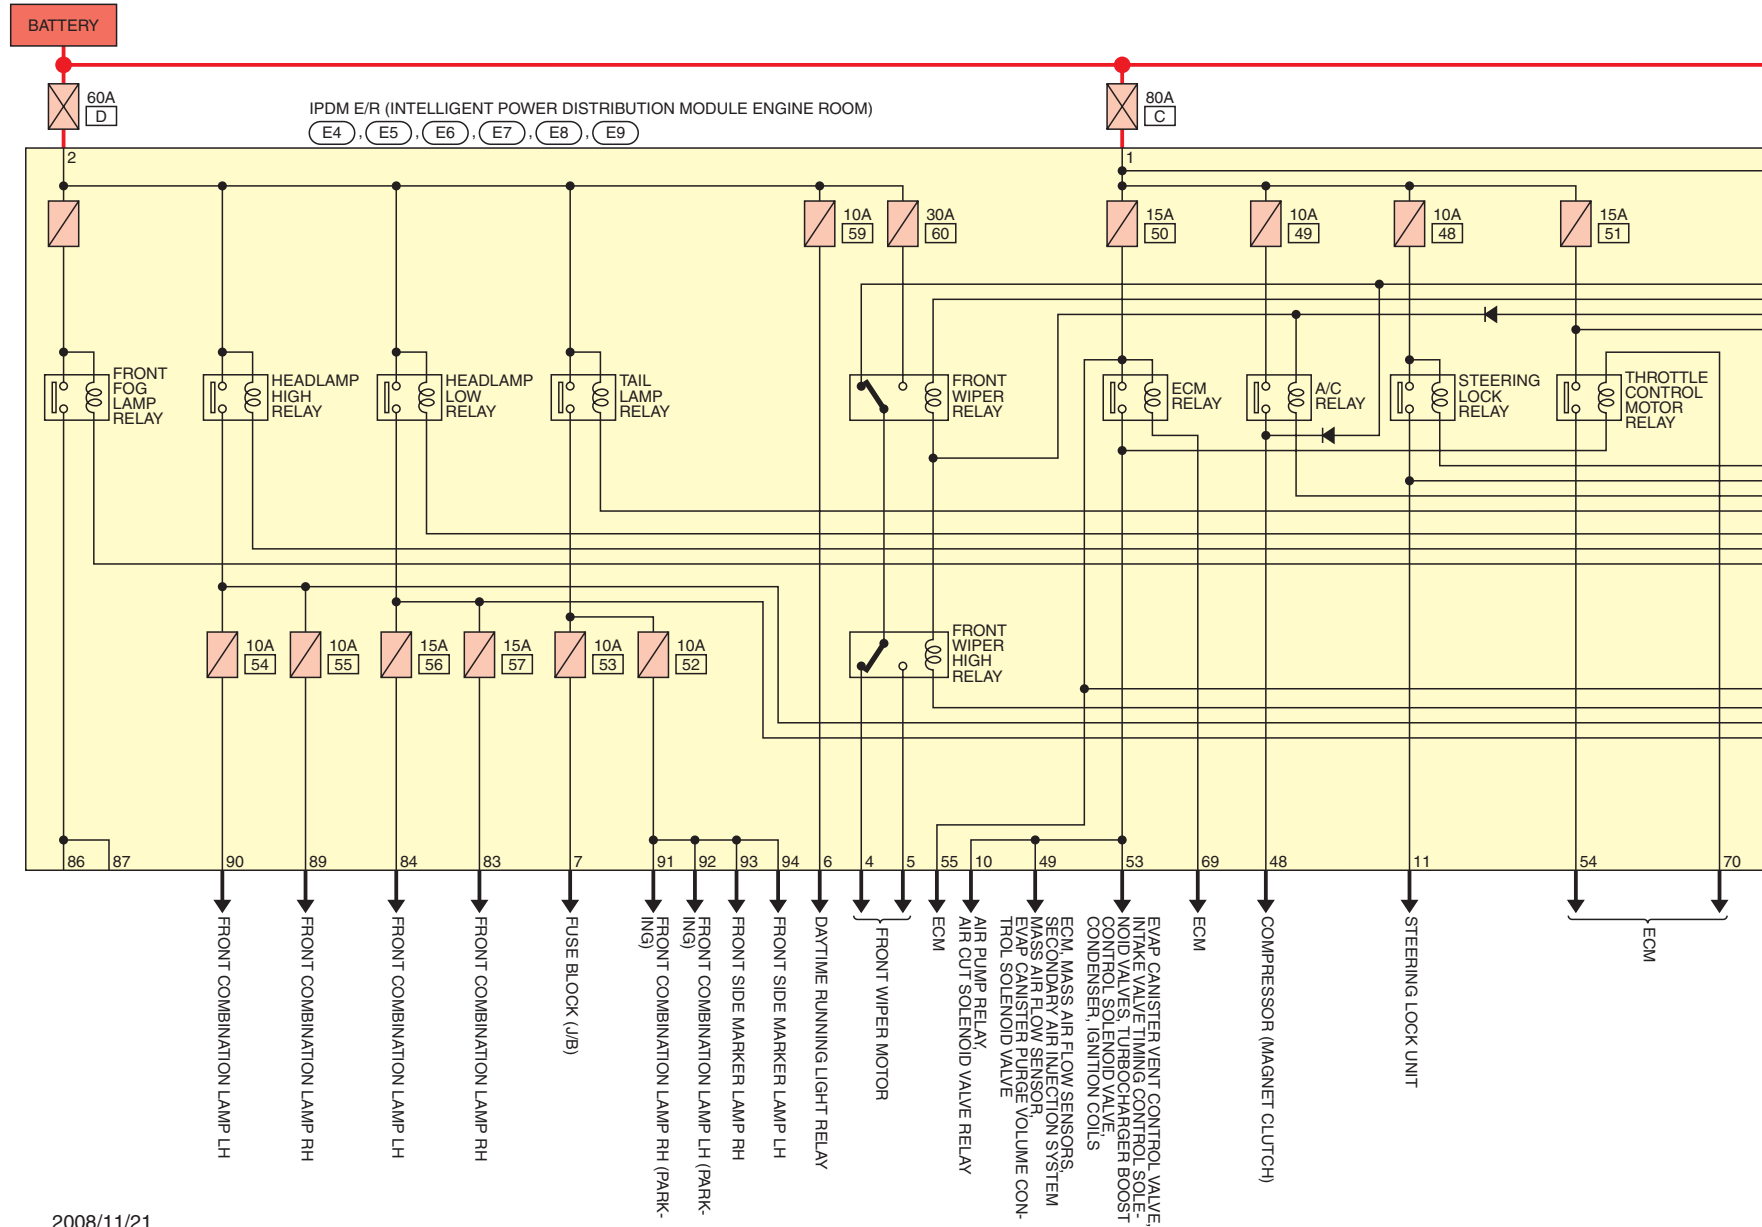

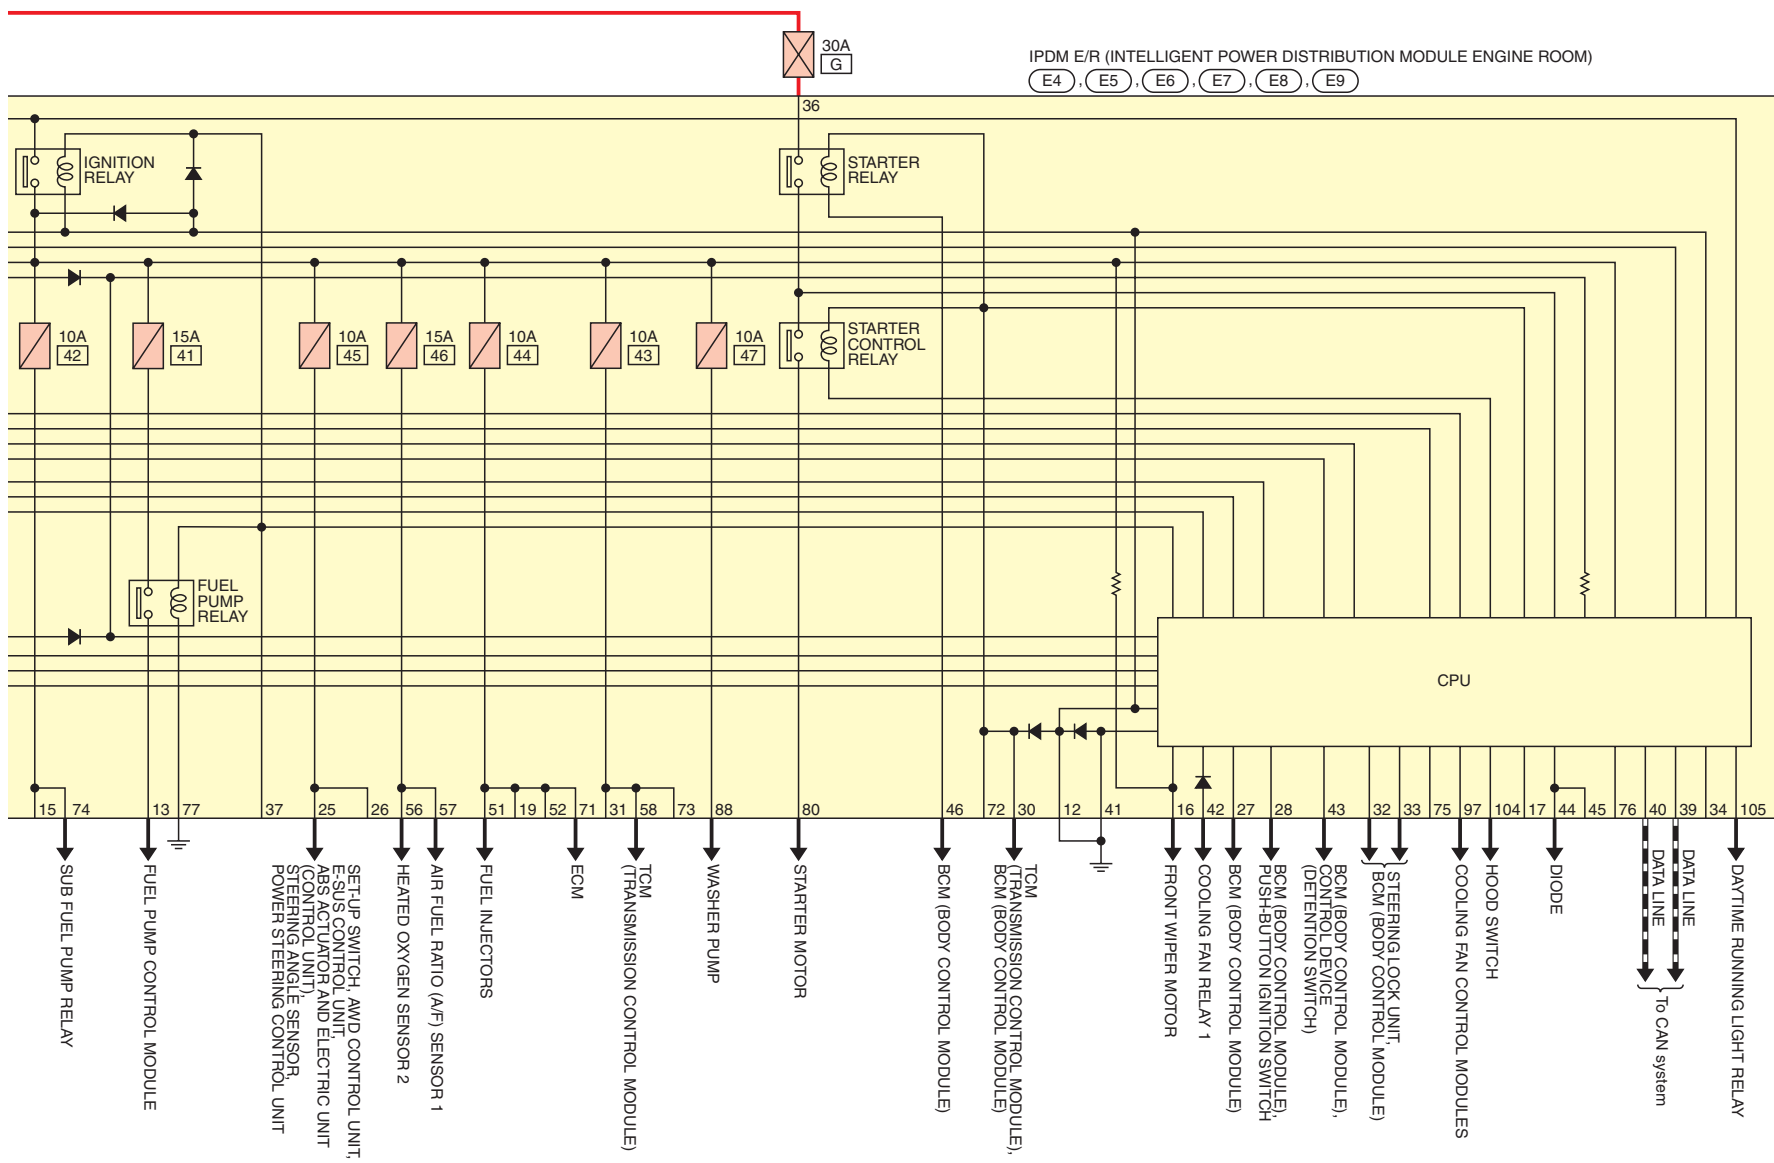

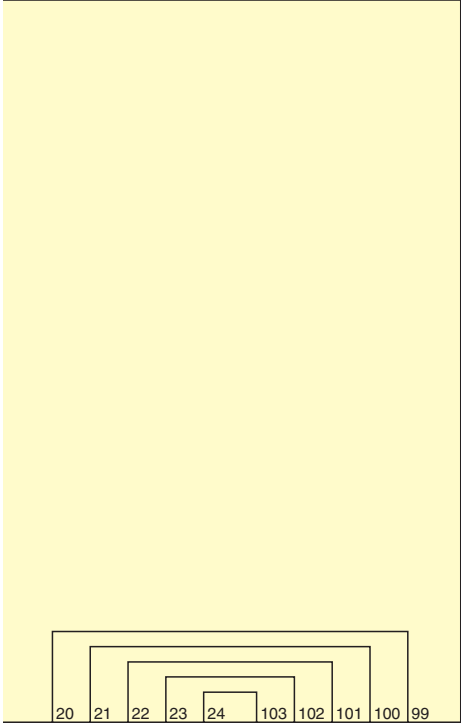

IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)

E4 , E5 , E6 ,
E7 , E8 , E9