

SRS AIR BAG CONTROL SYSTEM

Connector No.	B11
Connector Name	FRONT LH SIDE AIR BAG MODULE
Connector Type	TK02FY-EX-1V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B12
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	TK03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	SB	-

Connector No.	B22
Connector Name	FRONT LH SEAT BELT PRE-TENSIONER
Connector Type	ACA02FY-2V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B23
Connector Name	LH SATELLITE SENSOR
Connector Type	HK02FY-1V-EX




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Connector No.	B32
Connector Name	LH SIDE CURTAIN AIR BAG MODULE
Connector Type	ACA02FY-2V




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	B37
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK12FY-2V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
9	Y	PLH(+)
10	Y	PLH(-)
29	G	CLH(+)
30	R	CLH(-)
33	Y	SLH(+)
34	Y	SLH(-)
37	P	SATELLITE LH(+)
38	L	SATELLITE LH(-)
41	SB	LH BUCKLE SW INPUT
44	SHIELD	GND

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

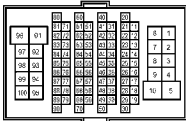

Terminal No.	Color of Wire	Signal Name [Specification]
71	R	-
72	V	-

Connector No.	B211
Connector Name	FRONT RH SIDE AIR BAG MODULE
Connector Type	TK02FY-EX-1V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-