


HEADLAMP

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/Y	-

Connector No.	E8
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	NS08FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
83	R	-
84	P	-
89	BR	-
90	O	-

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-PR




Terminal No.	Color of Wire	Signal Name [Specification]
1	B/W	-
3	B/L	-
5	P	-
7	O	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FB-PR




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
3	B/Y	- [For U.S.A.]
5	R	-
7	BR	-

Connector No.	E104
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
6	P	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

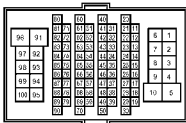


Terminal No.	Color of Wire	Signal Name [Specification]
91	GR	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
7A	R	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
12C	W	-