



INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

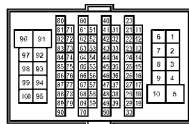


Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	P	-
12	GR	-
13	O	-
20	GR	-
63	LG	-
69	P	-
70	L	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
6	P	-

Connector No.	B20
Connector Name	CONTROL DEVICE
Connector Type	TH24FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BCM VCC IN
2	O	KEY I/LOCK(P)

Connector No.	B21
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW




Terminal No.	Color of Wire	Signal Name [Specification]
2	LG	-

Connector No.	B41
Connector Name	INSIDE KEY ANTENNA (TRUNK ROOM)
Connector Type	RK02FGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-

Connector No.	B45
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-RZ8-L-LH-Z

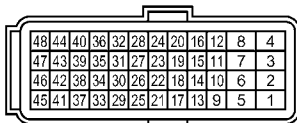

Terminal No.	Color of Wire	Signal Name [Specification]
19	GR	STARTER RELAY SIGNAL

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

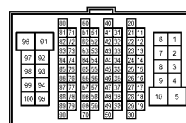

Terminal No.	Color of Wire	Signal Name [Specification]
61	P	-
62	L	-
64	GR	-
69	P	-
70	L	-

Connector No.	B221
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-