

SRS AIR BAG CONTROL SYSTEM

Connector No.	B212
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Type	TK03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	O	-

Connector No.	B222
Connector Name	FRONT RH SEAT BELT PRE-TENSIONER
Connector Type	ACA02FY-2V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B223
Connector Name	RH SATELLITE SENSOR
Connector Type	HK02FY-1V-EX




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	B232
Connector Name	RH SIDE CURTAIN AIR BAG MODULE
Connector Type	ACA02FY-2V




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Connector No.	B237
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK12FY-1V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	PRH(+)
8	Y	PRH(-)
25	O	RH BUCKLE SW INPUT
27	P	CRH(+)
28	L	CRH(-)
31	Y	SRH(+)
32	Y	SRH(-)
35	G	SATELLITE RH(+)
36	R	SATELLITE RH(-)
40	SHIELD	GND

Connector No.	B253
Connector Name	OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT
Connector Type	TH08FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	V	COMMUNICATION
4	R	IGN
5	B	GND

Connector No.	E36
Connector Name	CRASH ZONE SENSOR
Connector Type	HK02FY-1V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

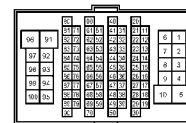

Terminal No.	Color of Wire	Signal Name [Specification]
51	SHIELD	-
60	P	-
61	L	-