


## BOSE AUDIO WITH NAVIGATION SYSTEM


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

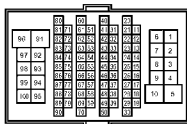

Terminal No.	Color of Wire	Signal Name [Specification]
6	V	-
7	W	-
10	R	-
69	P	-
70	L	-
71	SHIELD	-
72	SHIELD	-
80	R	- [With BOSE audio]
81	G	- [With BOSE audio]
82	BR	- [With BOSE audio]
83	Y	- [With BOSE audio]


84	SHIELD	-
85	V	- [With BOSE audio]
86	SB	- [With BOSE audio]
87	L	- [With BOSE audio]
88	P	- [With BOSE audio]
89	SHIELD	-
90	V	-
92	BR	-
93	SB	-
94	GR	-
95	O	-
96	Y	-
97	Y	-
98	LG	-
99	R	-
100	G	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
6	P	-


Connector No.	B16
Connector Name	BOSE AMP.
Connector Type	SGA12FBR-SJA2



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	SOUND SIGNAL FRONT DOOR SPEAKER LH (+)
2	Y	SOUND SIGNAL FRONT DOOR SPEAKER RH (+)
3	LG	SOUND SIGNAL FRONT DOOR SPEAKER RH (-)
4	O	SOUND SIGNAL FRONT DOOR SQUAWKER LH (-)
5	GR	SOUND SIGNAL FRONT DOOR SQUAWKER LH (+)
6	V	SOUND SIGNAL REAR SPEAKER LH (+)
7	LG	SOUND SIGNAL REAR SPEAKER LH (-)
8	SB	SOUND SIGNAL FRONT DOOR SQUAWKER RH (+)
9	P	SOUND SIGNAL WOOFER (+)
10	G	SOUND SIGNAL FRONT DOOR SPEAKER LH (-)
11	Y	BATTERY

12	B	GND
13	BR	SOUND SIGNAL FRONT DOOR SQUAWKER RH (-)
14	SB	SOUND SIGNAL WOOFER (-)

Connector No.	B17
Connector Name	BOSE AMP.
Connector Type	SCA19FBR-SGA4



Terminal No.	Color of Wire	Signal Name [Specification]
15	V	SOUND SIGNAL CENTER SPEAKER (+)
18	L	SOUND SIGNAL FRONT LH (+)
19	R	SOUND SIGNAL FRONT RH (+)
20	G	SOUND SIGNAL FRONT RH (-)
21	V	SOUND SIGNAL REAR LH (+)
22	SB	SOUND SIGNAL REAR LH (-)
23	BR	SOUND SIGNAL REAR RH (+)
25	W	WOOFER AMP. ON SIGNAL
27	O	SOUND SIGNAL REAR SPEAKER RH (-)
28	W	SOUND SIGNAL CENTER SPEAKER (-)
31	V	BOSE AMP. ON SIGNAL

32	P	SOUND SIGNAL FRONT LH (-)
33	Y	SOUND SIGNAL REAR RH (-)
37	LG	SOUND SIGNAL REAR SPEAKER RH (-)