



## TRANSMISSION CONTROL SYSTEM

Connector No.	E7
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4




Terminal No.	Color of Wire	Signal Name [Specification]
58	Y	—

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
2F	W	-
8F	L	-

Connector No.	E104
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	Y	-
5	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

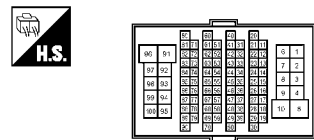


Terminal No.	Color of Wire	Signal Name [Specification]
4	O	—

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	—
2	W	—

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2

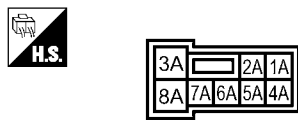


Terminal No.	Color of Wire	Signal Name [Specification]
4A	LG	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
12G	W	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

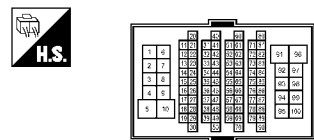

Terminal No.	Color of Wire	Signal Name [Specification]
4	G	-