



IGNITION POWER SUPPLY FUSE No. 44

Connector No.	E7
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4



Terminal No.	Color of Wire	Signal Name [Specification]
51	LG	-
71	SB	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

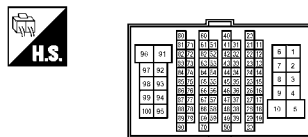


Terminal No.	Color of Wire	Signal Name [Specification]
46	SB	-
94	LG	-

Connector No.	F48
Connector Name	WIRE TO WIRE
Connector Type	RS08FGY-PR



Terminal No.	Color of Wire	Signal Name [Specification]
5	W	-

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK36FW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
9	W	-

Connector No.	F120
Connector Name	WIRE TO WIRE
Connector Type	RS08MGY-PR



Terminal No.	Color of Wire	Signal Name [Specification]
5	W/L	-

Connector No.	F121
Connector Name	FUEL INJECTOR No. 1
Connector Type	HS02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/L	-

Connector No.	F122
Connector Name	FUEL INJECTOR No. 2
Connector Type	HS02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/L	-

Connector No.	F123
Connector Name	FUEL INJECTOR No. 3
Connector Type	HS02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/L	-