



BATTERY POWER SUPPLY

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

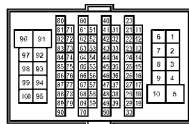

Terminal No.	Color of Wire	Signal Name [Specification]
43	Y	—

Connector No.	B213
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
9	Y	SOLVB

Connector No.	E1
Connector Name	FUSIBLE LINK HOLDER
Connector Type	L02FBR-MC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	—
2	W	—

Connector No.	E2
Connector Name	FUSIBLE LINK HOLDER
Connector Type	L02FGY-MC



Terminal No.	Color of Wire	Signal Name [Specification]
3	Y	—
4	R	—

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	RS08FB-PR




Terminal No.	Color of Wire	Signal Name [Specification]
3	W	—

Connector No.	E4
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	L02FB-MC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	—
2	Y	—

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
6	O	—
7	R	—
10	W	—
11	SB	—
12	B/W	—
36	LG	—

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	—
40	L	—
41	B/Y	—