



# SRS AIR BAG CONTROL SYSTEM

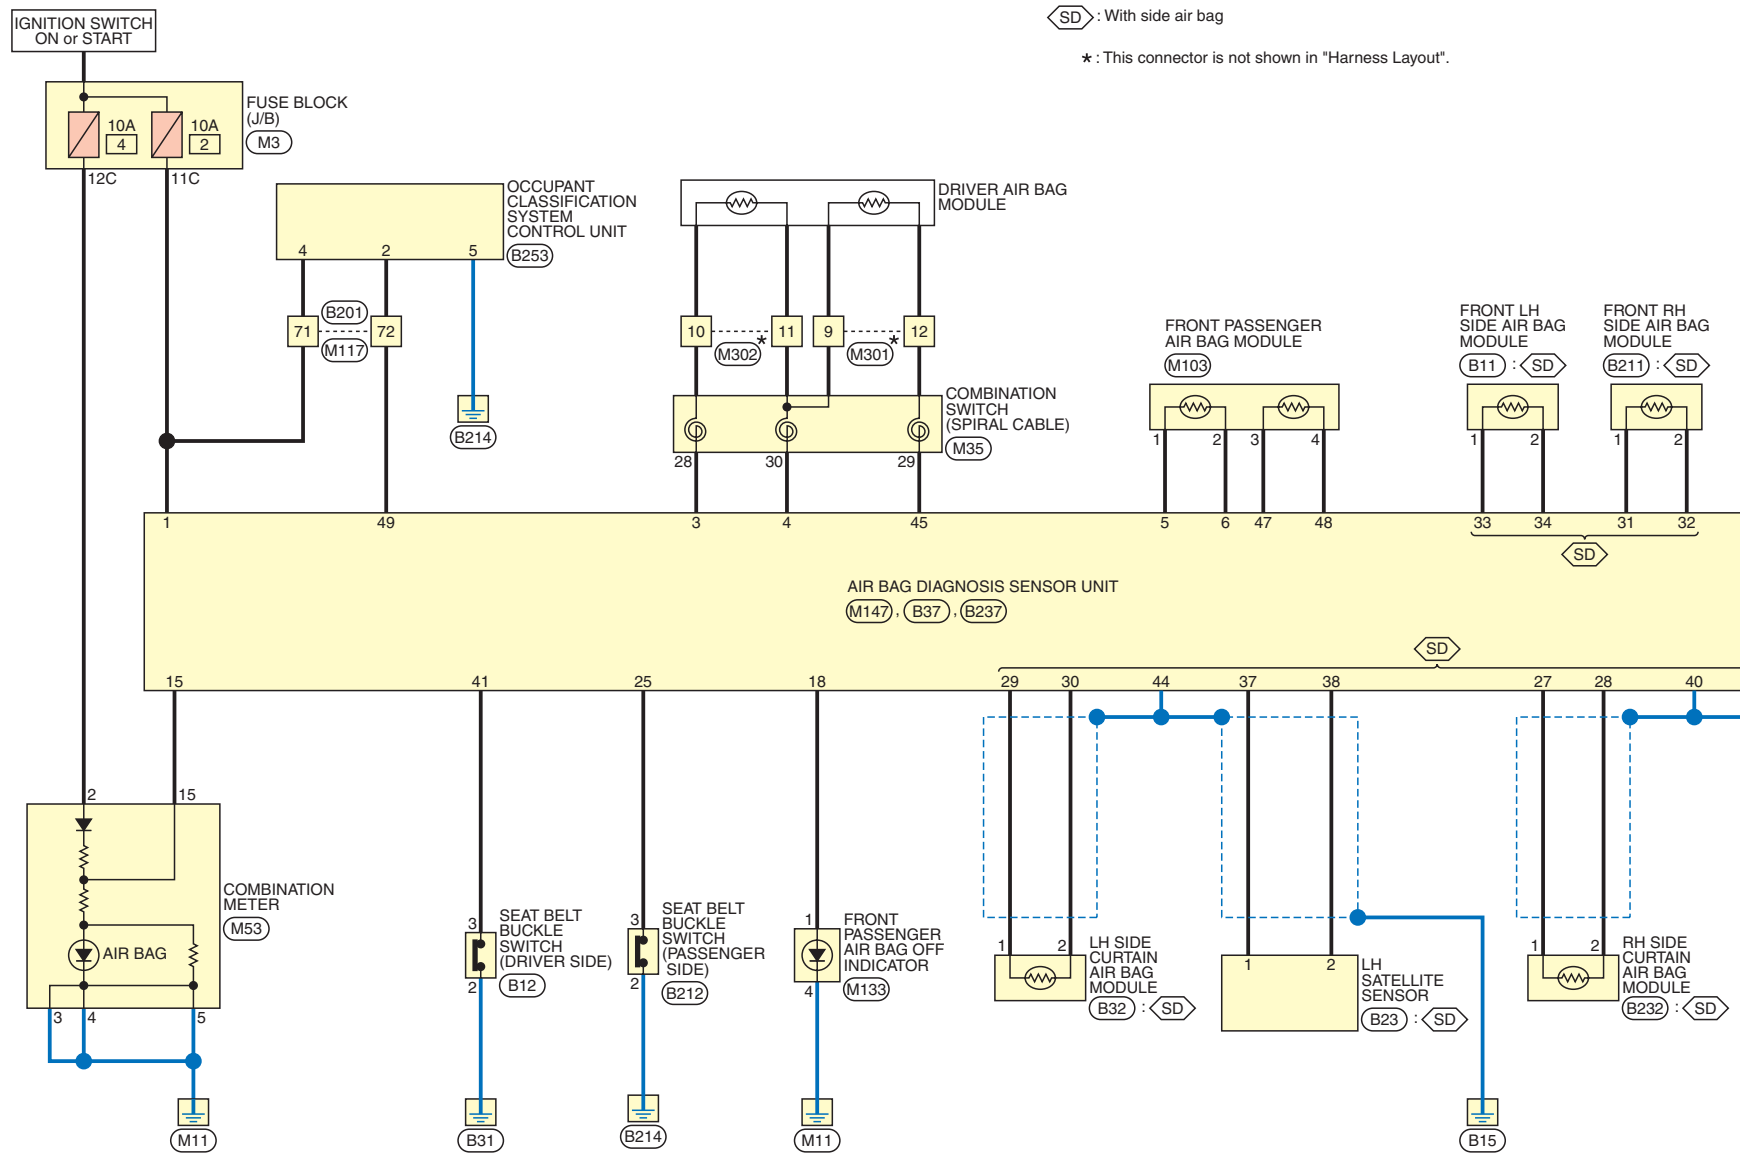

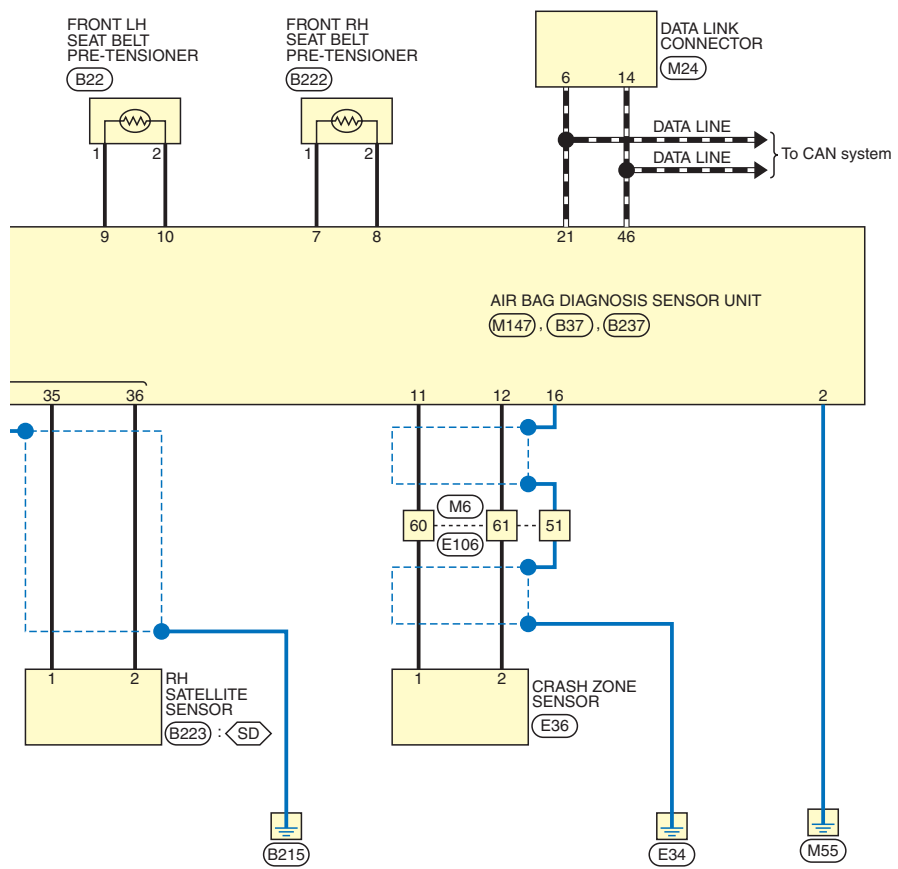

## SRS AIR BAG CONTROL SYSTEM

Connector No.	B11
Connector Name	FRONT LH SIDE AIR BAG MODULE
Connector Type	TK02FY-EX-1V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B12
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	TK03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	SB	-

Connector No.	B22
Connector Name	FRONT LH SEAT BELT PRE-TENSIONER
Connector Type	ACA02FY-2V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B23
Connector Name	LH SATELLITE SENSOR
Connector Type	HK02FY-1V-EX




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Connector No.	B32
Connector Name	LH SIDE CURTAIN AIR BAG MODULE
Connector Type	ACA02FY-2V




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	B37
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK12FY-2V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
9	Y	PLH(+)
10	Y	PLH(-)
29	G	CLH(+)
30	R	CLH(-)
33	Y	SLH(+)
34	Y	SLH(-)
37	P	SATELLITE LH(+)
38	L	SATELLITE LH(-)
41	SB	LH BUCKLE SW INPUT
44	SHIELD	GND

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

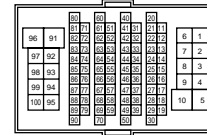

Terminal No.	Color of Wire	Signal Name [Specification]
71	R	-
72	V	-

Connector No.	B211
Connector Name	FRONT RH SIDE AIR BAG MODULE
Connector Type	TK02FY-EX-1V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

## SRS AIR BAG CONTROL SYSTEM

Connector No.	B212
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Type	TK03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	O	-

Connector No.	B222
Connector Name	FRONT RH SEAT BELT PRE-TENSIONER
Connector Type	ACA02FY-2V



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	Y	-

Connector No.	B223
Connector Name	RH SATELLITE SENSOR
Connector Type	HK02FY-1V-EX




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	B232
Connector Name	RH SIDE CURTAIN AIR BAG MODULE
Connector Type	ACA02FY-2V




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-

Connector No.	B237
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK12FY-1V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	PRH(+)
8	Y	PRH(-)
25	O	RH BUCKLE SW INPUT
27	P	CRH(+)
28	L	CRH(-)
31	Y	SRH(+)
32	Y	SRH(-)
35	G	SATELLITE RH(+)
36	R	SATELLITE RH(-)
40	SHIELD	GND

Connector No.	B253
Connector Name	OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT
Connector Type	TH08FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	V	COMMUNICATION
4	R	IGN
5	B	GND

Connector No.	E36
Connector Name	CRASH ZONE SENSOR
Connector Type	HK02FY-1V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-


Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

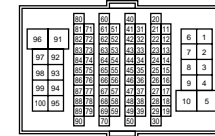

Terminal No.	Color of Wire	Signal Name [Specification]
51	SHIELD	-
60	P	-
61	L	-


## SRS AIR BAG CONTROL SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
11C	R	—
12C	W	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

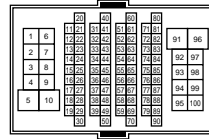


Terminal No.	Color of Wire	Signal Name [Specification]
51	SHIELD	—
60	SB	—
61	V	—

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color of Wire	Signal Name [Specification]
6	L	—
14	P	—

Connector No.	M35
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK06FY-EX-1V



Terminal No.	Color of Wire	Signal Name [Specification]
28	Y	—
29	Y	—
30	Y	—

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB40FW




Terminal No.	Color of Wire	Signal Name [Specification]
2	W	IGNITION POWER SUPPLY
3	B	GROUND
4	B	ILL GND
5	B	GROUND
15	R	AIR BAG

Connector No.	M103
Connector Name	FRONT PASSENGER AIR BAG MODULE
Connector Type	RK04FY-BD




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	—
2	Y	—
3	Y	—
4	Y	—

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

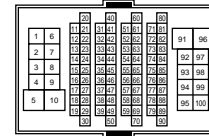

Terminal No.	Color of Wire	Signal Name [Specification]
71	Y	—
72	V	—


Connector No.	M133
Connector Name	FRONT PASSENGER AIR BAG OFF INDICATOR
Connector Type	TH04MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	—
4	B	—

SRS AIR BAG CONTROL SYSTEM

Connector No.	M147
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK28FY-EX-SC

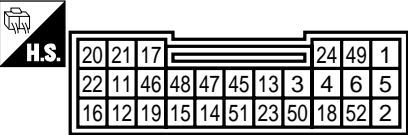

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-) DR2 (-)
5	Y	AS1 (+)
6	Y	AS1 (-)
11	SB	ECZS (+)
12	V	ECZS (-)
15	R	AIR BAG W/L
16	SHIELD	GND
18	R	CUTOFF TELLTALE

21	L	CAN-H
45	Y	DR2 (+)
46	P	CAN-L
47	Y	AS2 (+)
48	Y	AS2 (-)
49	V	ODS INPUT

Connector No.	M301
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	ACA02FOR



Terminal No.	Color of Wire	Signal Name [Specification]
9	-	-
12	-	-

Connector No.	M302
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	ACA02FY-2V



Terminal No.	Color of Wire	Signal Name [Specification]
10	-	-
11	-	-