


INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
7A	R	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
3B	P	-
6B	Y	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
12C	W	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

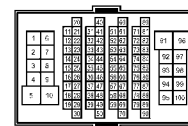

Terminal No.	Color of Wire	Signal Name [Specification]
11	G	-
13	R	-
14	L	-
15	BR	-
32	G	-
33	GR	-
90	Y	-
82	SB	-
91	GR	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

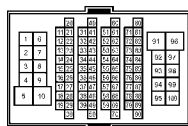

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	P	-
12	SB	-
13	G	-
20	GR	-
63	GR	-
69	P	-
70	L	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Connector No.	M29
Connector Name	SECURITY INDICATOR LAMP
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	G	-

Connector No.	M40
Connector Name	STEERING LOCK UNIT
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	S/L 12V (MECHANICAL)
2	Y	S/L (K LINE)
3	L	S/L CONDLTON1
5	B	GND
6	B	GND
7	P	S/L 12V(CPU)
8	R	S/L CONDLTON2