



CONSULT-III CHECKING SYSTEM

Connector No.	B45
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-RZ8-L-LH-Z

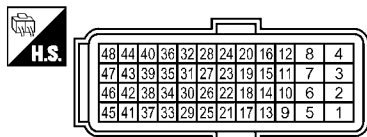

Terminal No.	Color of Wire	Signal Name [Specification]
11	L	CAN-H
15	P	CAN-L

Connector No.	B213
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FW-NH

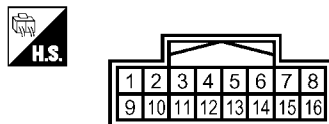


Terminal No.	Color of Wire	Signal Name [Specification]
8	L	CAN-H
16	P	CAN-L

Connector No.	E6
Connector Name	JPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH08FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	AEZ43FB-AJZ4




Terminal No.	Color of Wire	Signal Name [Specification]
15	P	CAN-L
30	L	CAN-H

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
2A	G	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
6B	Y	-

Connector No.	M14
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH32FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	CAN-(L)
2	L	CAN-(H)

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

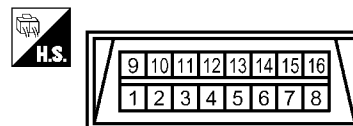

Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-
5	B	-
6	L	-
8	G	-
14	P	-
16	Y	-