



BATTERY POWER SUPPLY FUSE No. 53

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
7	R	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
9F	R	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
8B	R	-

Connector No.	M12
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
10	R	-

Connector No.	M20
Connector Name	TRUNK LID OPENER SWITCH
Connector Type	TK04FW




Terminal No.	Color of Wire	Signal Name [Specification]
3	R	-

Connector No.	M35
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK06FY-EX-1V




Terminal No.	Color of Wire	Signal Name [Specification]
23	P	-

Connector No.	M54
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH

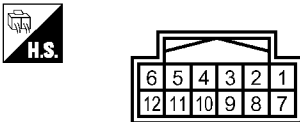

Terminal No.	Color of Wire	Signal Name [Specification]
4	R	-

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-NH

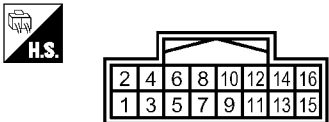

Terminal No.	Color of Wire	Signal Name [Specification]
4	P	ILL