


BATTERY POWER SUPPLY FUSE No. 6

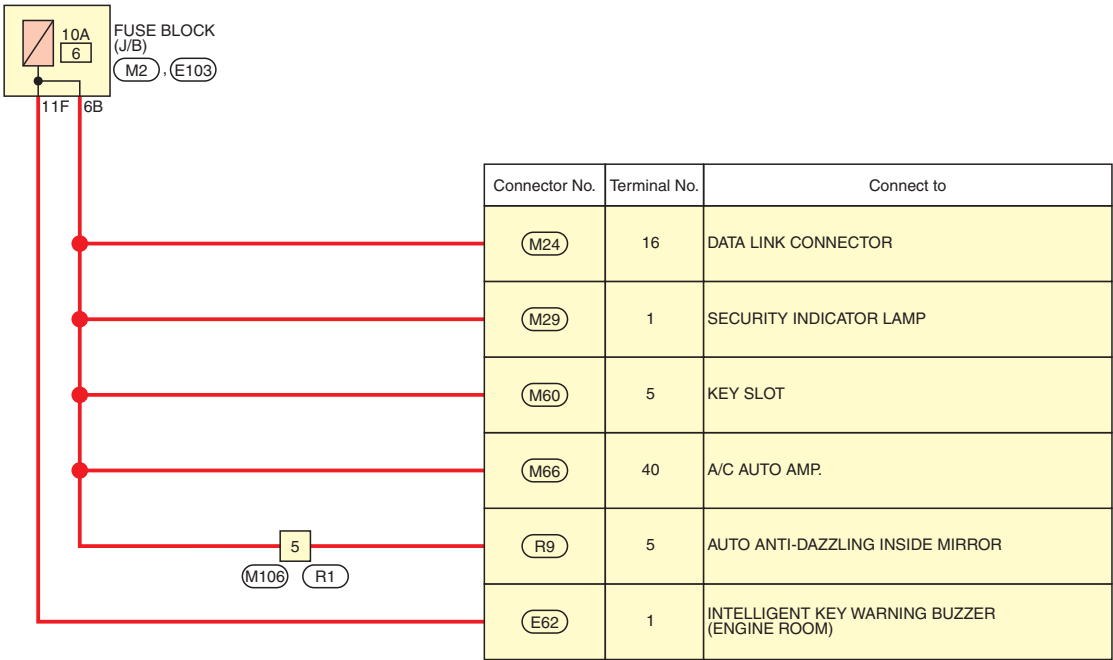


BATTERY POWER SUPPLY FUSE No. 6

Connector No.	E62
Connector Name	INTELLIGENT KEY WARNING BUZZER (ENGINE ROOM)
Connector Type	RK03FBR-DGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
11F	Y	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
6B	Y	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-

Connector No.	M29
Connector Name	SECURITY INDICATOR LAMP
Connector Type	TK02FBR




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	M60
Connector Name	KEY SLOT
Connector Type	TH12FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
5	Y	ILL BAT

Connector No.	M66
Connector Name	A/C AUTO AMP.
Connector Type	SAB40FW



Terminal No.	Color of Wire	Signal Name [Specification]
40	Y	BATTERY POWER SUPPLY


Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	TH12MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
5	Y	-


BATTERY POWER SUPPLY FUSE No. 6

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
5	B/Y	-

Connector No.	R9
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Type	TH10FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
5	B/Y	BAT