


IGNITION POWER SUPPLY FUSE No. 45

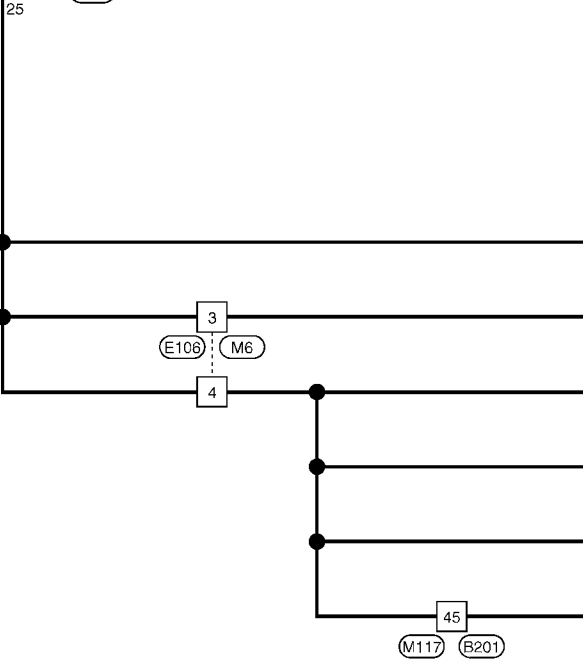

Connector No.	Terminal No.	Connect to
E41	29	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
M110	19	E-SUS CONTROL UNIT
M37	4	STEERING ANGLE SENSOR
M73	18	SET-UP SWITCH
M108	3	POWER STEERING CONTROL UNIT
B213	7	AWD CONTROL UNIT