


## IGNITION POWER SUPPLY

|                |                  |
|----------------|------------------|
| Connector No.  | E102             |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | M02FB-LC         |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1E           | LG            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E103             |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS16FW-CS        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4F           | G             | -                           |
| 6F           | O             | -                           |
| 10F          | GR            | -                           |

|                |              |
|----------------|--------------|
| Connector No.  | E104         |
| Connector Name | WIRE TO WIRE |
| Connector Type | NS12MW-CS    |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | -                           |
| 4            | Y             | -                           |
| 6            | P             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E106            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |

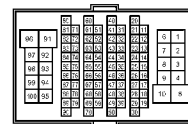

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 5            | R             | -                           |
| 12           | O             | -                           |
| 80           | Y             | -                           |
| 91           | GR            | -                           |
| 92           | R             | -                           |
| 96           | GR            | -                           |
| 98           | LG            | -                           |

|                |              |
|----------------|--------------|
| Connector No.  | F1           |
| Connector Name | WIRE TO WIRE |
| Connector Type | RS08MB-PR    |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | O             | -                           |
| 8            | P             | -                           |

|                |  |
|----------------|--|
| Connector No.  | F8                                     |
| Connector Name | AIR FUEL RATIO (A/F) SENSOR I (BANK 1) |
| Connector Type | AFZ04FDGY                              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | P             | -                           |

|                |  |
|----------------|--|
| Connector No.  | F25                                    |
| Connector Name | AIR FUEL RATIO (A/F) SENSOR I (BANK 2) |
| Connector Type | AFZ04FDGY                              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | P             | -                           |

|                |            |
|----------------|------------|
| Connector No.  | F35        |
| Connector Name | COMPRESSOR |
| Connector Type | RS01FB     |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | O             | MAGNET CLUTCH POWER SUPPLY  |