#### **1998-99 ENGINE COOLING**

## **Cooling System Specifications & Drive Belt Routing**

# MODEL IDENTIFICATION

#### **MODEL IDENTIFICATION - CARS**

Body Code <sup>(1)</sup>	Model
"C"	Park Avenue
"E"	Eldorado
"F"	Camaro & Firebird
"G"	Aurora & Riviera
"H"	Bonneville, Eighty Eight, LeSabre & LSS
"J"	Cavalier & Sunfire
"K"	<sup>(2)</sup> DeVille & Seville
"M"	Metro
"N"	Alero, Cutlass, Grand Am & Malibu
"S"	Prizm
"V"	Catera
"W"	Century, Grand Prix, Intrigue, Lumina, Monte Carlo & Regal
"Y"	Corvette
"Z"	Saturn
(1) Vehicle body code is fourth character of VIN.	
<sup>(2)</sup> Includes Concours and D'Elegance.	

#### **MODEL IDENTIFICATION - TRUCKS**

Series <sup>(1)</sup>	Model
"C"	2WD Pickup, Sierra, Silverado, Suburban, Tahoe & Yukon
"E"	2WD Tracker
"G"	Cutaway, Express, G-Van & Savana
"J"	4WD Tracker
"K"	4WD Pickup, Sierra, Silverado, Suburban, Tahoe, Yukon & AWD Escalade
"L"	AWD Astro & Safari
"M"	2WD Astro & Safari
"P"	Forward Control (P42) & Motorhome (P32)
"S"	2WD Blazer, Envoy, Jimmy, Pickup & Sonoma
"T"	4WD Blazer, Bravada, Envoy, Jimmy, Pickup & Sonoma
"U"	Montana, Silhouette, Trans Sport & Venture
(1) Vehicle series is fifth character of VIN.	

# **DRIVE BELT ROUTING**

#### SERPENTINE BELT ROUTING & ALIGNMENT - CARS

NOTE: For serpentine belt routing, see underhood label or See Fig. 1 -Fig. 15.



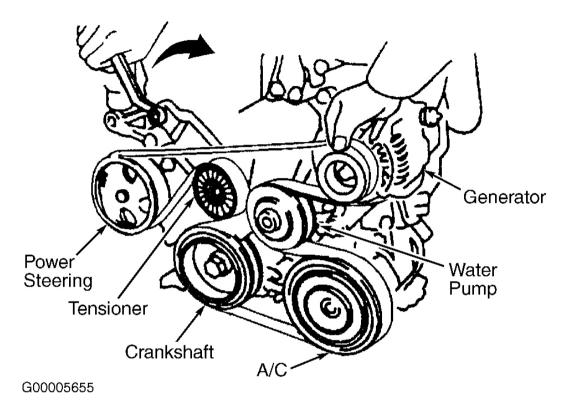


Fig. 1: Serpentine Belt Routing (1.8L Prizm)


Courtesy of GENERAL MOTORS CORP.

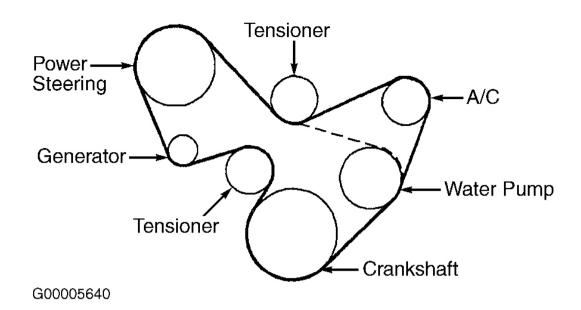


**Fig. 2: Serpentine Belt Routing (1.9L Saturn DOHC)** Courtesy of GENERAL MOTORS CORP.

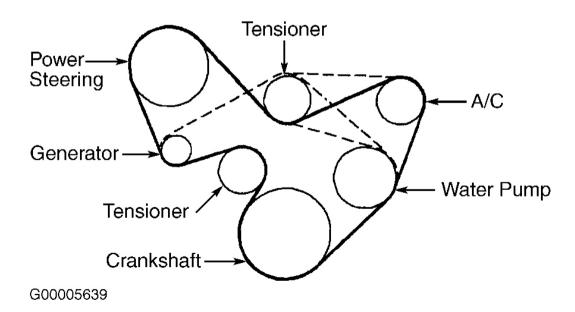

**Fig. 3: Serpentine Belt Routing (1.9L Saturn SOHC)** Courtesy of GENERAL MOTORS CORP.

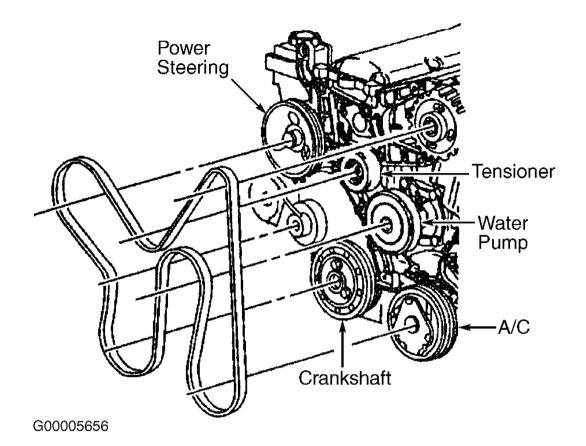

**Fig. 4: Serpentine Belt Routing (2.2L ''J'' Body - With A/C)** Courtesy of GENERAL MOTORS CORP.

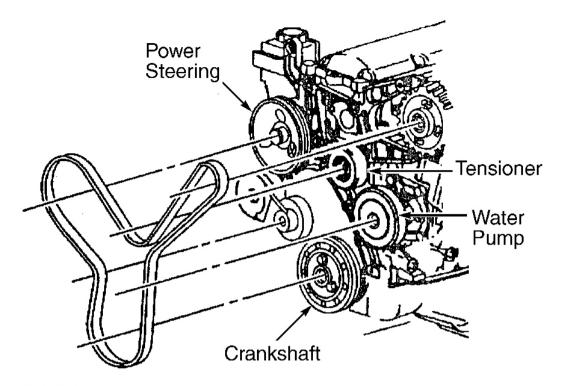

## **Fig. 5: Serpentine Belt Routing (2.2L ''J'' Body - Without A/C)** Courtesy of GENERAL MOTORS CORP.


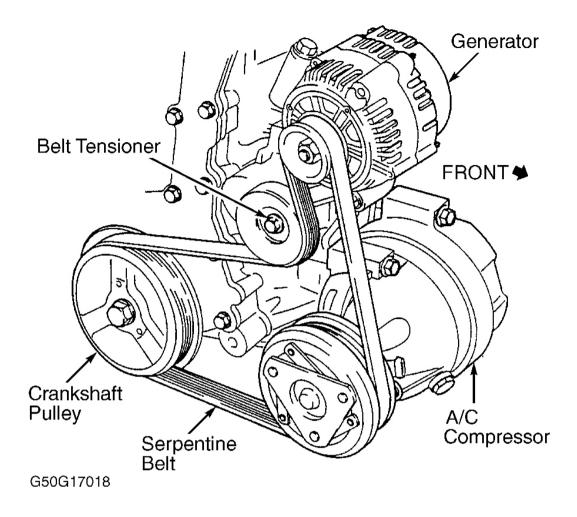


Fig. 6: Serpentine Belt Routing (2.4L "J" & "N" Bodies) Courtesy of GENERAL MOTORS CORP.

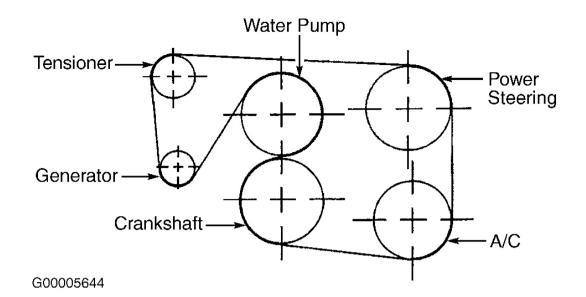

**Fig. 7: Serpentine Belt Routing (3.0L "V" Body) Courtesy of GENERAL MOTORS CORP.** 



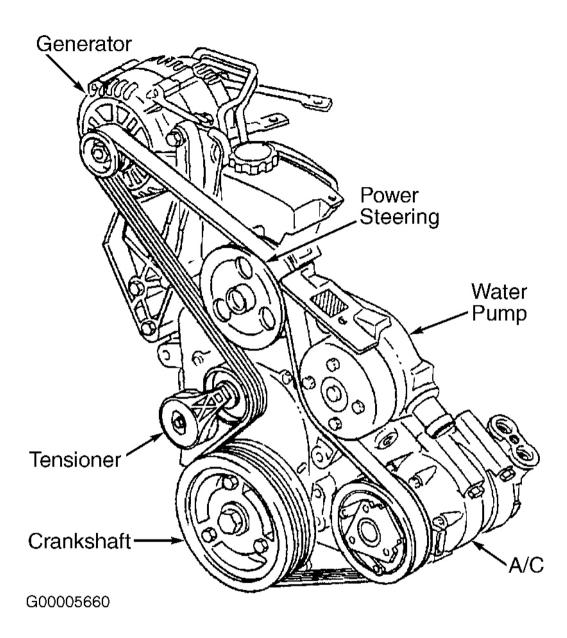


Fig. 8: Serpentine Belt Routing (3.1L & 3.4L "N" & "W" Body - Except Cutlass & Malibu) Courtesy of GENERAL MOTORS CORP.

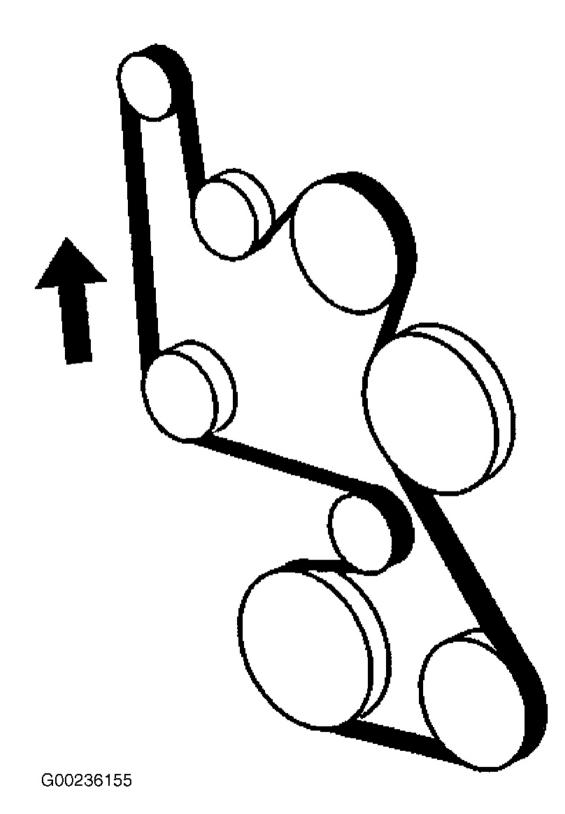

#### Fig. 9: Serpentine Belt Routing (3.1L & 3.4L "N" & "W" Body - Cutlass & Malibu) Courtesy of GENERAL MOTORS CORP.

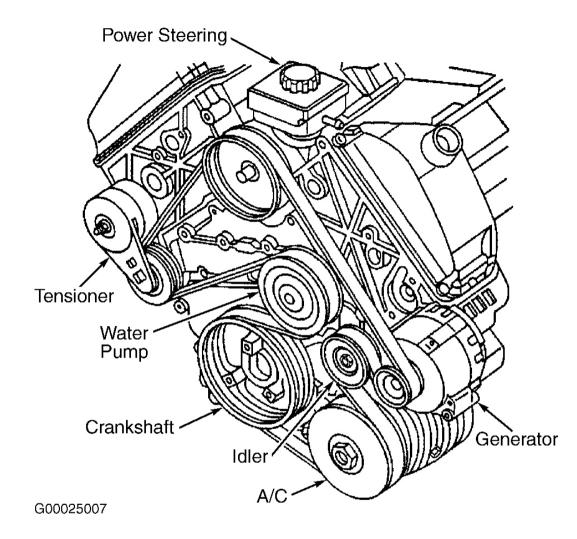

**Fig. 10: Serpentine Belt Routing (3.5L ''W'' Body)** Courtesy of GENERAL MOTORS CORP.


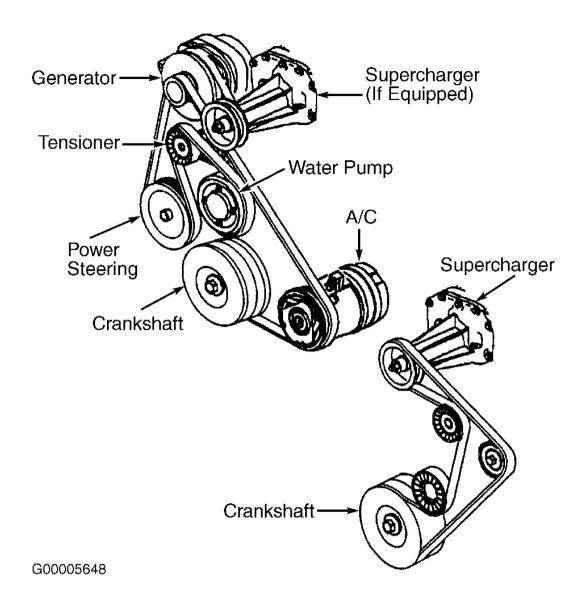


Fig. 11: Serpentine Belt Routing (3.8L "C", "G", "H" & "W" Bodies) Courtesy of GENERAL MOTORS CORP.

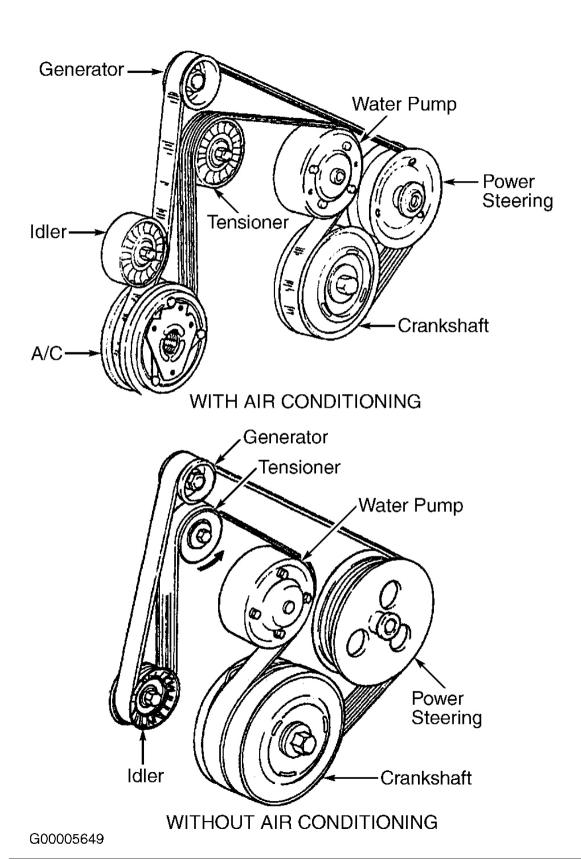

#### **Fig. 12: Serpentine Belt Routing (3.8L "F" Body)** Courtesy of GENERAL MOTORS CORP.



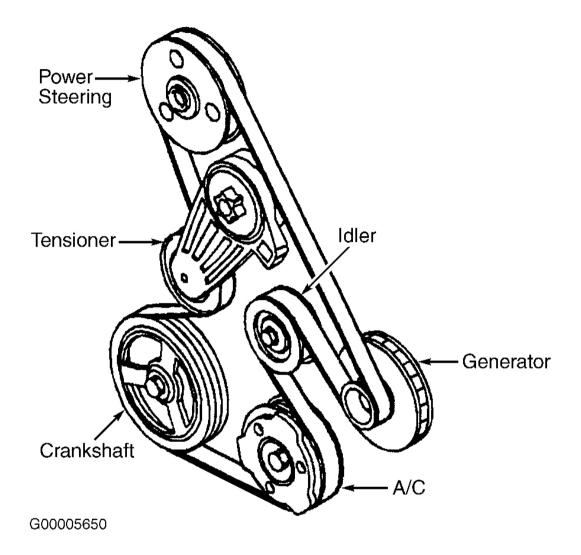


Fig. 13: Serpentine Belt Routing (4.0L "G" Body & 4.6L "E" & "K" Bodies) Courtesy of GENERAL MOTORS CORP.

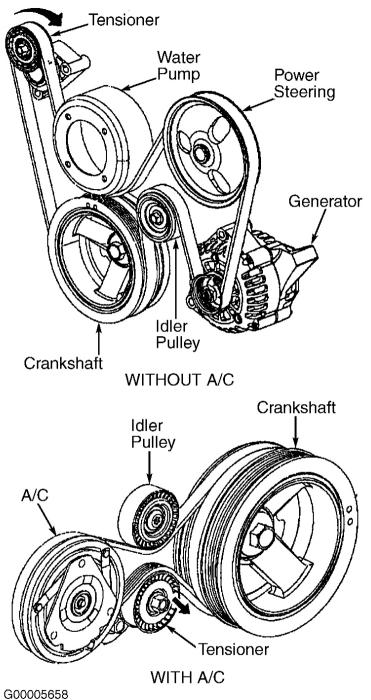


## Fig. 14: Serpentine Belt Routing (5.7L "F" Body) Courtesy of GENERAL MOTORS CORP.

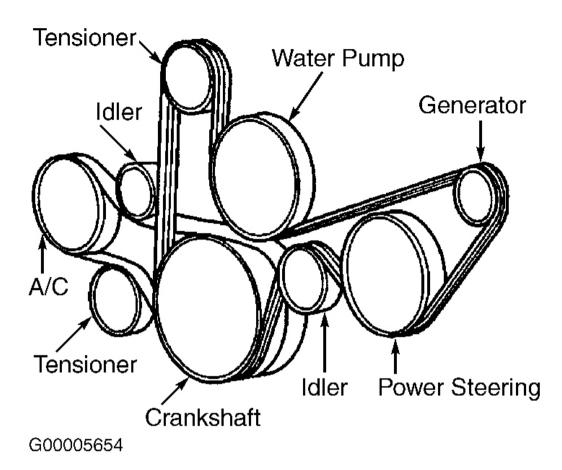


**Fig. 15: Serpentine Belt Routing (5.7L "Y" Body) Courtesy of GENERAL MOTORS CORP.** 

## SERPENTINE BELT ROUTING & ALIGNMENT - TRUCKS


NOTE: For serpentine belt routing, see underhood label or See Fig. 16 -Fig. 22.

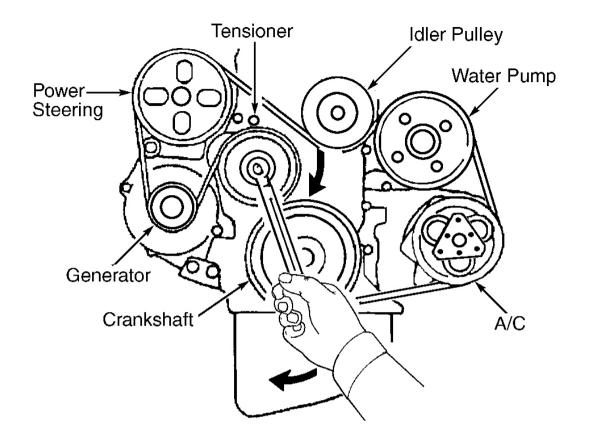

**Fig. 16: Serpentine Belt Routing (2.0L Tracker)** Courtesy of GENERAL MOTORS CORP.

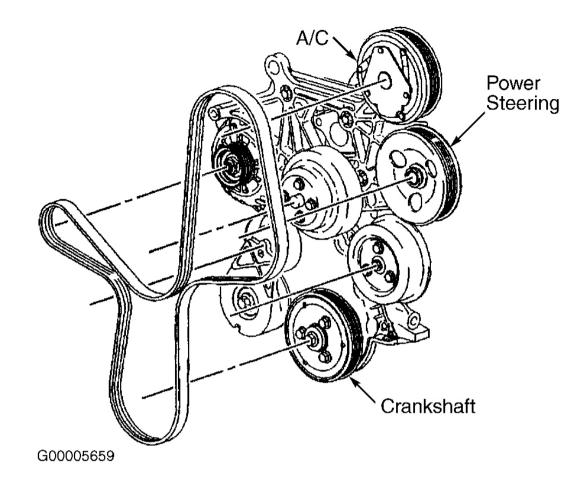

**Fig. 17: Serpentine Belt Routing (2.2L ''S'' Series)** Courtesy of GENERAL MOTORS CORP.

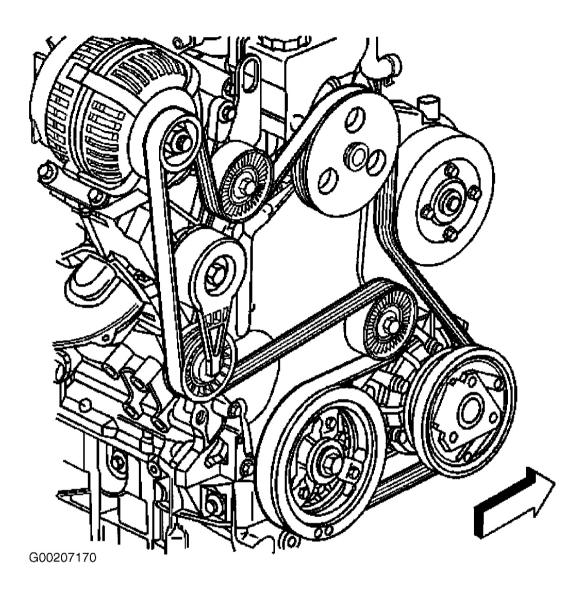

**Fig. 18: Serpentine Belt Routing (3.4L "U" Series)** Courtesy of GENERAL MOTORS CORP.


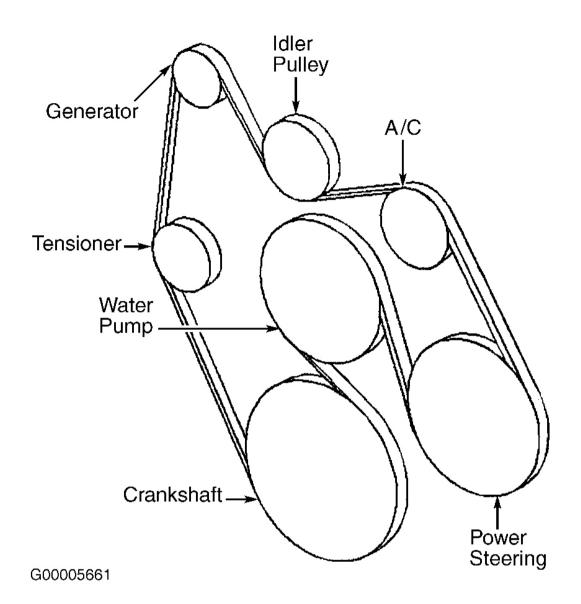


Fig. 19: Serpentine Belt Routing (4.3L, 5.0L, 5.7L & 7.4L "C", "G", "K", "L", "M", "P", "S" & "T" Series) Courtesy of GENERAL MOTORS CORP.

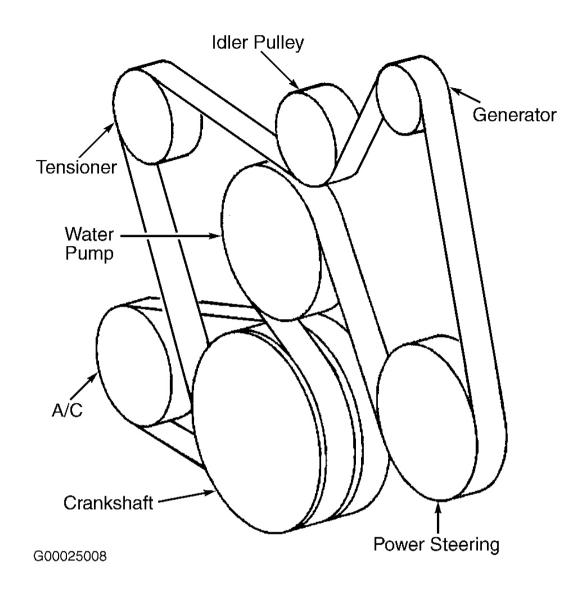

## Fig. 20: Serpentine Belt Routing (4.8L, 5.3L & 6.0L "C" & "K" Series) Courtesy of GENERAL MOTORS CORP.

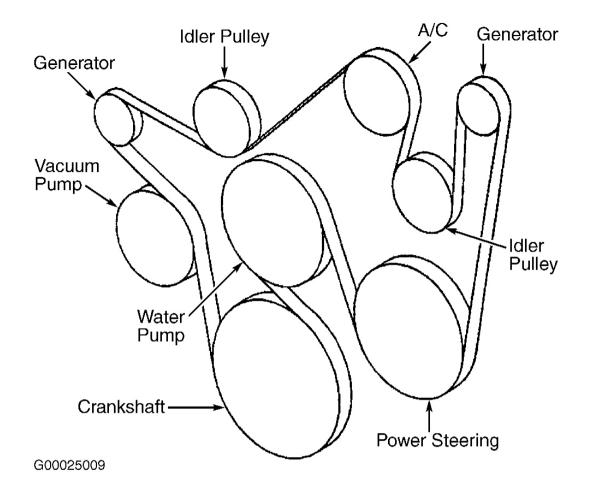


Fig. 21: Serpentine Belt Routing (6.5L Turbo-Diesel "C", "G" & "K" Series With Dual Generators) Courtesy of GENERAL MOTORS CORP.

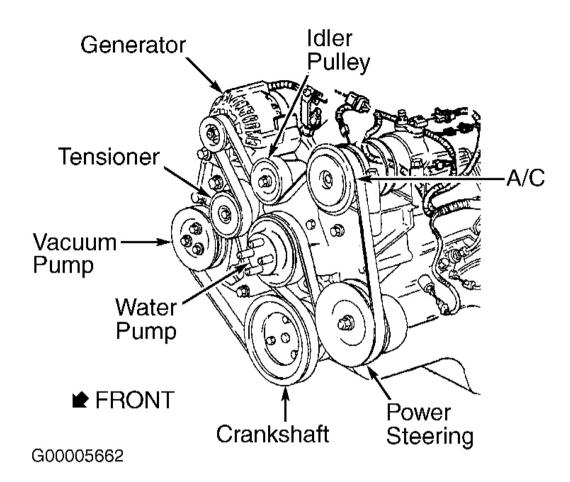


Fig. 22: Serpentine Belt Routing (6.5L Turbo-Diesel "C", "G" & "K" Series Without Dual Generators) Courtesy of GENERAL MOTORS CORP.

# **REMOVAL & INSTALLATION**

CUTLASS & MALIBU ONLY (3.1L & 3.4L)

NOTE: Removal and installation procedure given on these vehicles only due to the complicated procedure involved.

Removal


## NOTE: Tools Required: J-39914 Drive Belt Tension Wrench.

- 1. Disconnect the negative battery cable. Using the J-39914, rotate the belt tensioner. See Fig. 23.
- 2. Remove the drive belt from the generator pulley. Support the engine by the oil pan.


- 3. Remove the engine mount assembly from the engine mount bracket support. See <u>Fig. 24</u>. Remove the auxiliary bracket.
- 4. Lower the engine in order to remove the drive belt. See **<u>Fig. 25</u>**. Remove the drive belt.

#### Installation


- 1. Using the J-39914, rotate the belt tensioner and install the drive belt.
- Install the auxiliary bracket. Install the auxiliary bracket fasteners. Tighten the fasteners to 37 ft. lbs. (50 N.m).
- 3. Install the engine mount assembly to the engine mount bracket support bolts.
- 4. Remove the floor jack. Connect the negative battery cable.

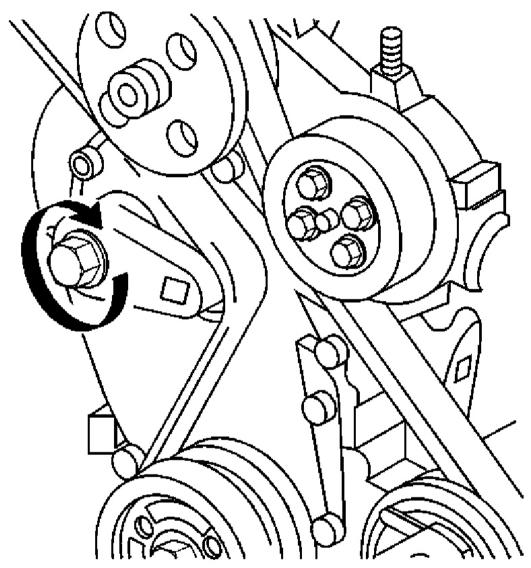

**Fig. 23: Rotating The Belt Tensioner Courtesy of GENERAL MOTORS CORP.** 

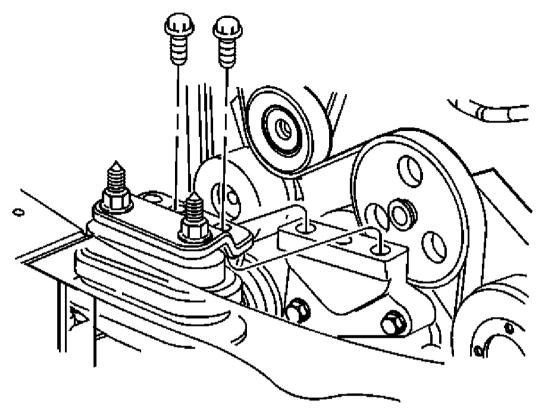

**Fig. 24: Seperating Engine Mount Bracket Courtesy of GENERAL MOTORS CORP.** 

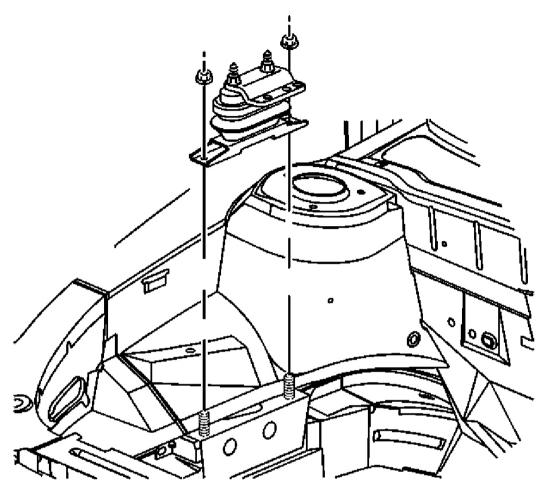

**Fig. 25: Removing & Installing Engine Mount** Courtesy of GENERAL MOTORS CORP.

# **SPECIFICATIONS**

CAUTION: When battery is disconnected, vehicle computer and memory systems may lose memory data. Driveability problems may exist until computer systems have completed a relearn cycle. See COMPUTER RELEARN PROCEDURES article in GENERAL INFORMATION before disconnecting battery.

**BELT ADJUSTMENT** 

**BELT ADJUSTMENT - CARS** 

Application	Specification	
Serpentine Belt	<sup>(1)</sup> 30-50 Lbs. (13.6-22.7 kg.)	
Except Serpentine Belt - Deflection @ 22 Lbs. (10.0 kg.)		
Metro		
A/C Compressor & Power Steering Pump	.2835 (7.0-9.0)	
Generator	.2431 (6-8)	
<sup>(1)</sup> Serpentine belt is automatically adjusted by tensioner. Tension is checked with belt tension gauge. If tension is not as specified, check belt length and tensioner operating range. Replace belt or tensioner as necessary.		

#### **BELT ADJUSTMENT - TRUCKS**

Application	<sup>(1)</sup> Lbs. (kg)
All Models	(1)
(1) Sementine belt tension is maintained automatically by a spring-tensioned idler pulley. No adjustment	

<sup>(1)</sup> Serpentine belt tension is maintained automatically by a spring-tensioned idler pulley. No adjustment is necessary.

## COOLING SYSTEM SPECIFICATIONS

#### **COOLING SYSTEM SPECIFICATIONS - CARS**

Application	Specification	
Coolant Replacement Interval		
Except Metro & Prizm	60 Months Or 150,000 Miles	
Metro	30 Months Or 30,000 Miles	
Prizm	24 Months Or 30,000 Miles	
Coolant Capacity <sup>(1)</sup>		
1.0L	4.1 Qts. (3.9L)	
1.3L		
M/T	4.9 Qts. (4.6L)	
A/T	5.0 Qts. (4.7L)	
1.8L		
Prizm		
A/T	6.0 Qts. (5.7L)	
M/T	6.1 Qts. (5.8L)	
1.9L	7.0 Qts. (6.6L)	
2.2		
"J" Body	9.6 Qts. (9.1L)	
2.4L		
"J" Body	9.9 Qts. (9.4L)	
"N" Body	11.3 Qts. (10.7L)	
3.0L	10.0 Qts. (9.5L)	

3.1L	
"L" & "N" Bodies	13.6 Qts. (12.9L)
"W" Body	11.7 Qts. (11.0L)
3.4L	13.6 Qts. (12.9L)
3.5L	9.8 Qts. (9.3L)
3.8L	
Except "F" & "W" Bodies	13.0 Qts. (12.3L)
"F" Body	
A/T	12.3 Qts. (11.6L)
M/T	12.5 Qts. (11.8L)
"W" Body	10.7 Qts. (10.1L)
4.0L	13.0 Qts. (12.3L)
4.6L Except Seville	10.7 Qts. (10.1L)
4.6L Seville	12.5 Qts. (11.8L)
5.7L	
"F" Body	
A/T	15.1 Qts. (14.3L)
M/T	15.3 Qts. (14.5L)
"Y" Body	
A/T	12.3 Qts. (11.6L)
M/T	12.6 Qts. (11.9L)
Pressure Cap	
"F" Body	18 psi
Metro	13 psi
Prizm	13 psi
Saturn	15 psi
All Others	<sup>(2)</sup> 15 psi
Thermostat	
Prizm	
Starts To Open	176-183°F (80-84°C)
Fully Opens	203°F (95°C)
Metro	
Starts To Open	190-197°F (88-92°C)
Fully Opens	212-221°F (100-105°C)
Saturn	
Starts To Open	182-190°F (83-88°C)
Fully Open	212-222°F (100-106°C)
All Others	
Starts To Open	189°F (87°C)
Fully Opens	207°F (97°C)

(1) Specification is approximate and includes heater capacity.

(2) Or specification stamped on cap.

## **COOLING SYSTEM SPECIFICATIONS - TRUCKS**

Application	Specification
Coolant Replacement Interval	
Except Tracker	60 Months Or 150,000 Miles
Tracker	30 Months Or 30,000 Miles
Pressure Cap	
Except Tracker	15 psi
Tracker	13 psi
Thermostat Opens	
Except Tracker	
Starts	188°F (87°C)
Fully Open	206°F (97°C)
Tracker	
Starts	179°F (82°C)
Fully Open	203°F (95°C)
Coolant Capacity <sup>(1)</sup>	
1.6L	
Tracker	6.9 Qts. (6.5L)
Tracker	5.8 Qts. (5.5L)
2.2L	11.6 Qts. (11.0L)
3.4L	
With Rear Heater	12.4 Qts. (11.75L)
Without Rear Heater	11.8 Qts. (11.25L)
4.3L	
"C" & "K" Series	
A/T	12.7 Qts. (12.0L)
M/T	13.0 Qts. (12.3L)
"G" & "P" Series	
With Rear Heater	14.0 Qts. (13.2L)
Without Rear Heater	11.0 Qts. (10.5L)
"L" & "M" Series	
With Rear Heater	16.5 Qts. (15.5L)
Without Rear Heater	13.5
	Qts. (12.8L)
"P" Series	13.0 Qts. (12.3L)
"S" & "T" Series	

A/T	11.7 Qts. (11.1L)
M/T	11.9 Qts. (11.3L)
4.8L	
A/T	13.4 Qts. (12.7L)
M/T	13.7 Qts. (13.0L)
5.0L	
With A/C	18.0 Qts. (17.0L)
Without A/C	17.5 Qts. (16.6L)
5.3L	
With A/C	14.9 Qts. (14.1L)
Without A/C	13.4 Qts. (12.7L)
5.7L	
Standard	
With A/C	20.0 Qts. (19.0L)
Without A/C	17.5 Qts. (16.6L)
Heavy Duty	
With A/C	27.0 Qts. (25.5L)
Without A/C	26.4 Qts. (25.0L)
6.0L	
A/T	
With Oil Cooler	14.4 Qts. (13.6L)
Without Oil Cooler	14.8 Qts. (14.0L)
M/T	
With Oil Cooler	14.8 Qts. (14.0L)
Without Oil Cooler	15.2 Qts. (14.4L)
6.5L	25.0 Qts. (23.7L)
7.4L	
Standard	
With A/C	27.5 Qts. (26.0L)
Without A/C	25.0 Qts. (23.7L)
Heavy Duty	
With A/C	28.5 Qts. (27.0L)
Without A/C	26.4 Qts. (25.0L)
(1) Specification is approximate and includes heate	er capacity.