



Color spectrum Bar

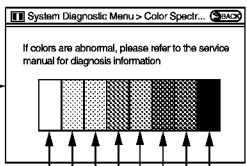

- CYAN:
Close to light blue
- MAGENTA:
Close to purplish red

Display diagnosis
main screen


Gradation Bar

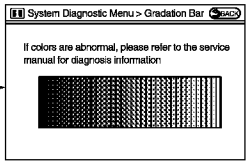

- The gray-scale image
is indicated 32-step
gradation.


Black ↔ GRAY ↔ WHITE

Touch Panel

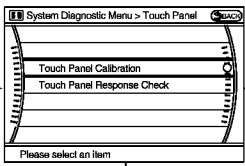


Touch Panel Calibration


- The function allows
correction of the position
detection accuracy of
the touch panel.

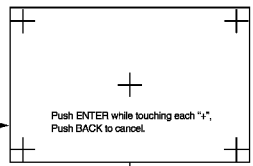

Push ENTER while
touching each "+".

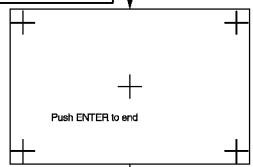

Push ENTER to end.

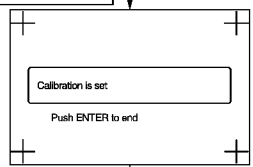

Touch Panel Response Check

- The function can check the
presence of a "+" indication
and deviation from where
it should be while touching
the touch panel.

